 
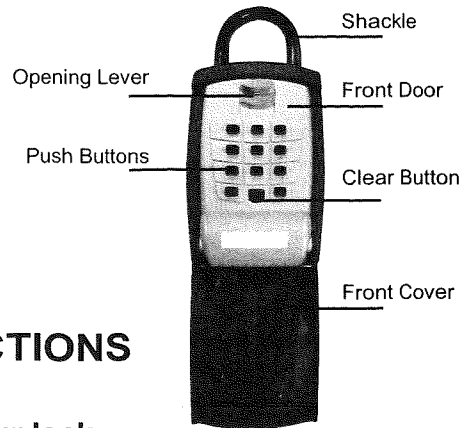 
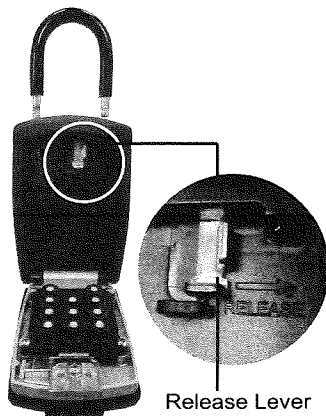 
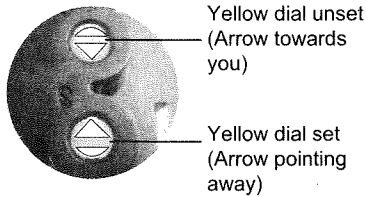 


Your sentry for safe entry

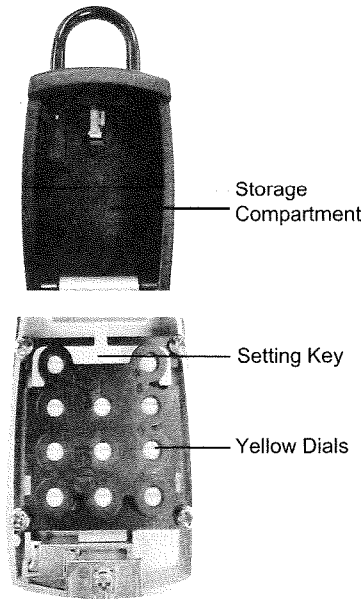

INSTRUCTIONS

Opening your lock

1. Open the Front Cover from the top to reveal the Push Buttons and the Opening Lever.
2. When purchased, no combination is set, push down the Opening Lever to open.

Setting your personal combination

1. Open the Front Door to reveal the setting mechanism.
2. Remove the Setting Key.
3. Choose a combination and write it down prior to setting the lock. (A normal pin number is four digits, however we recommend using more numbers or choosing a name e.g DAVIS which would be 32847)
4. Using the Setting Key, turn the yellow dial of the chosen digit, e.g. 3, 180 degrees, so that the arrow is pointing away from you.
5. Back to the Front Door, repeat Push Buttons for each chosen number/letter.
6. Test combination prior to closing the lid (see note 1)
 - 6.1 After setting, if you push the opening lever, it will appear to be locked.
 - 6.2 Enter your combination to test the function.
 - 6.3 Before re-enter combination, please pull the Clear Button to clear number.
 - 6.4 Re-enter combination and push Lever to close.
7. Return Setting Key to original position for future use.

Opening your shackle

1. Open your lock (refer to above).
2. Slide the Release Lever in direction of the arrow.
3. Open lock Shackle.
4. Then remove Shackle.
5. Affix to suitable anchor.

Closing your shackle

1. Holding the Release Lever in the direction of the arrow.
2. Relocate Shackle into lock.
3. Then release the Release Lever.

NOTES:

1. You can change the combination at any time.
2. We suggest that you mount the lock in a discrete location away from direct view, such as porches, garage, out of direct eye line.
3. Keep front cover closed to increase weather resistance and to conceal the dials from view.